

WIRING THE *BELTROL* OM-PnP ESC.

PLEASE NOTE. THE LIGHTING OUTPUTS ON THE OM-PnP ARE PRE-WIRED VIA THE PINS ON THE ESC.

